


Support bracket for FR+L

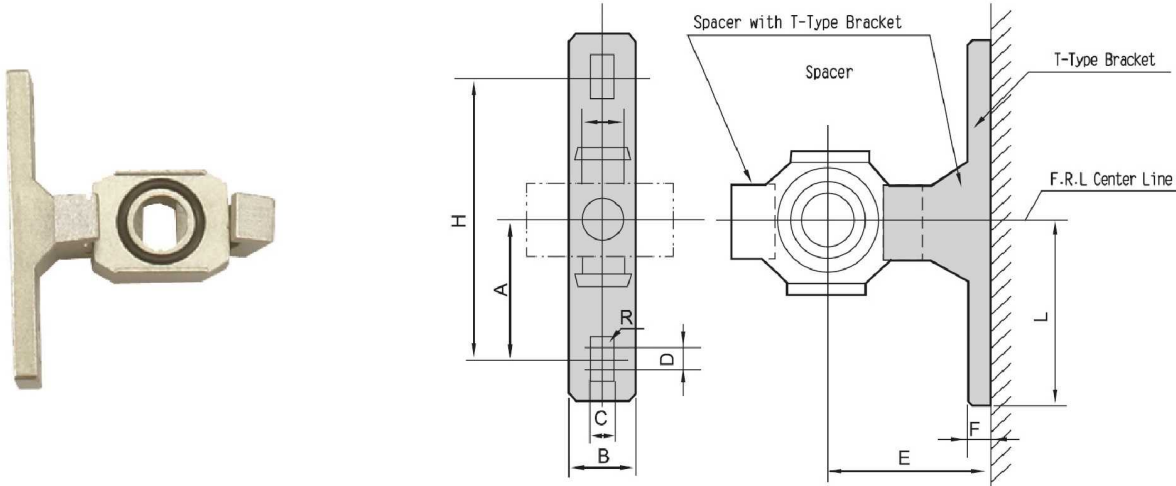

Part nº	T TYPE SPACER	A	B	C	D	E	F	G	H	L	R
SOPORTE FR+L 14	1/4 M	24	15	5,5	3	30	5	10	48	33	2,75
SOPORTE FR+L 12	1/2 M	40	22	9	4	50	7	14	80	50	4,5