


Support bracket for FRL

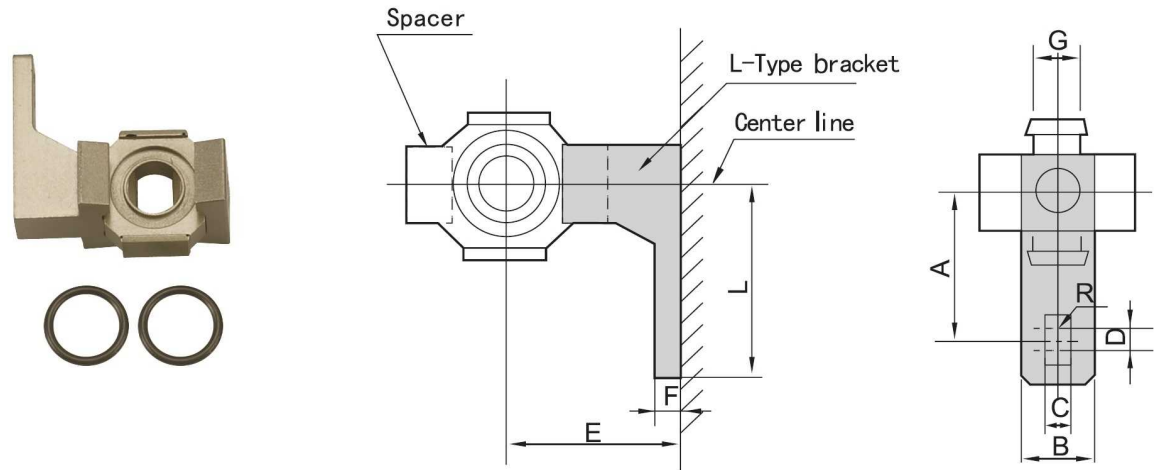

Part nº	L TYPE SPACER	A	B	C	D	E	F	G	L	R
SOPORTE FRL14	1/4 M	24	15	5,5	3	30	5	10	33	2,75
SOPORTE FRL12	1/2 M	40	22	9	4	50	7	14	50	4,5
SOPORTE FRL1	1 M	50	23	12	4	69,8	10,5	15	63	6