
Control valves

Sectional hydraulic control valves

carry over fitting



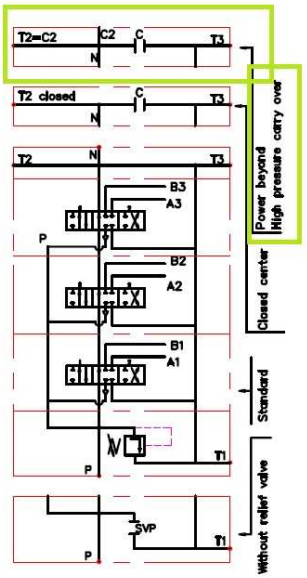

Part nº	CONTROL VALVE
YFM00007	YFMC70/YFMCE70/YFMC100

IT IS MANDATORY TO ENABLE TANKS T1 OR T3. WHEN THE PRESSURE CONTINUATION FITTING T2 IS FITTED, IT IS CAPPED.

The information gathered in this technical documentation (Catalogue) has an informative character and can be modified without previous notice. DICSA will not accept any type of responsibility resulting from an inappropriate use of the product, except the ones related to manufacturing defects.