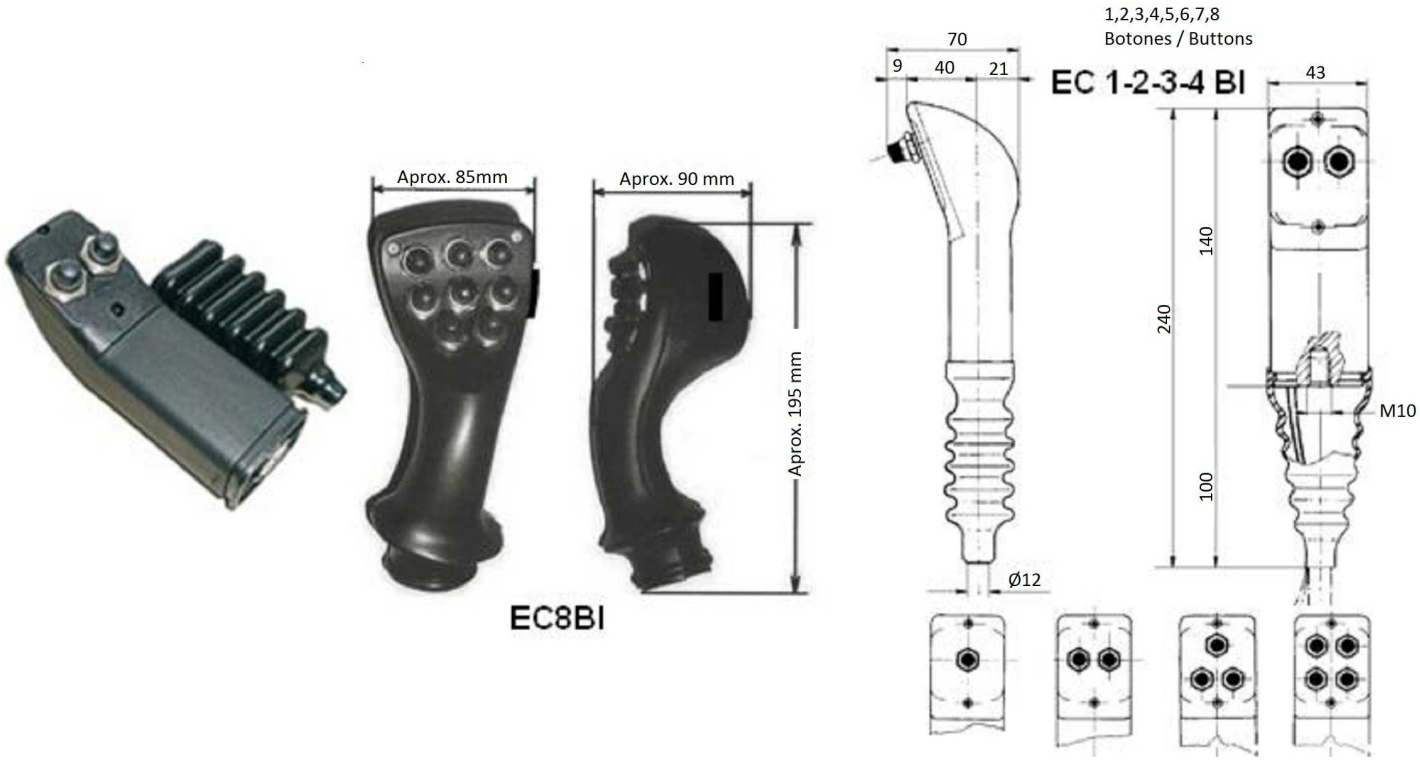


EC8BI has a switch of 2 contacts

Part nº	Buttons nr.
EC1B	1
EC2B	2
EC3B	3
EC4B	4
EC8BI	8+1 switch
BOTON EMP.COBRA	COBRA HANDLE BUTTON

***** Review attached PDF*****

The information gathered in this technical documentation (Catalogue) has an informative character and can be modified without previous notice. DICSA will not accept any type of responsibility resulting from an inappropriate use of the product, except the ones related to manufacturing defects.