


DFR Variable flow pumps

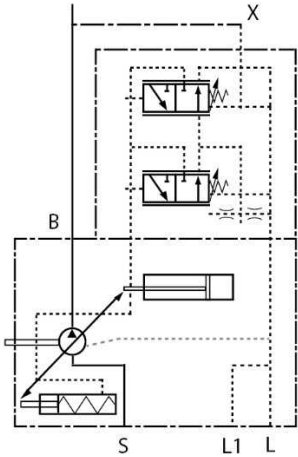

**BPCV...0101** = A10VO...DFR/31R-PSC12N00  
**BPCV...0202** = A10VSO...DFR/31R-PPA12N00  
**DFR CONTROL**= PRESSURE AND FLOW CONTROL

| Part n°              | Ø ASPIRATION    | Ø PRESSURE    | WORK PRESSURE<br>(bar) | MAX. TORQUE<br>(Nm) | Max. RPM | DISPLACEMENT<br>(cm3/rev) |
|----------------------|-----------------|---------------|------------------------|---------------------|----------|---------------------------|
| <b>BPCV28DFR0101</b> | 1"1/4 3000PSI   | 3/4" 3000 PSI | 280                    | 125                 | 3000     | 28                        |
| <b>BPCV28DFR0102</b> | 1"1/4 3000PSI   | 3/4" 3000 PSI | 280                    | 125                 | 3000     | 28                        |
| <b>BPCV28DFR0202</b> | 1"1/4 3000PSI   | 3/4" 3000 PSI | 280                    | 125                 | 3000     | 28                        |
| <b>BPCV45DFR0101</b> | 1" 1/2 3000 psi | 1" 3000 psi   | 280                    | 200                 | 2600     | 45                        |
| <b>BPCV45DFR0102</b> | 1" 1/2 3000 psi | 1" 3000 psi   | 280                    | 200                 | 2600     | 45                        |
| <b>BPCV45DFR0202</b> | 1" 1/2 3000 psi | 1" 3000 psi   | 280                    | 200                 | 2600     | 45                        |
| <b>BPCV71DFR0101</b> | 2" 3000 psi     | 1" 3000 psi   | 280                    | 316                 | 2200     | 71                        |
| <b>BPCV71DFR0202</b> | 2" 3000 psi     | 1" 3000 psi   | 280                    | 316                 | 2200     | 71                        |

\*\*\* Review attached PDF\*\*\*  
Carry LS socket  
Control 3/8"  
NBR GASKET  
TURN RIGHT