

Bosch Rexroth

HAB32-330-6X/0G09G-2N111-CE+NR13 bladder accumulator

Manufacturer: Bosch Rexroth

Manufacturer part number / published order designation: R901454315

Published model: HAB32-330-6X/0G09G-2N111-CE+NR13

About this compilation

Prepared by Hydmaster from selected manufacturer documentation. Original technical pages follow without cropped drawings, rewritten data or altered units. This cover and index are Hydmaster editorial material, not a manufacturer-issued exact-execution datasheet.

Coverage: selected pages relevant to the identified size and configuration. Other options or neighbouring models retained on an original page apply only where explicitly identified.

Execution notes and conditions

No approval/certification suitability is inferred from the literal suffix. No delivered gas precharge is assigned.

Source-page index

Source page numbers below are physical pages of each complete original PDF. The original printed page labels and technical content remain unchanged. Compiled page numbers count this cover/index.

Source A: Bosch Rexroth Hab Re50171 2020 Original

Original pages	Compiled pages	Relevant content
1-10	2-11	Accumulator function and selected edition; Exact volume, pressure, connection and material ordering options; CE+NR13 execution key and article-family ordering context; Bladder function and section; Volume-specific vessel ratings and compatible fluids; Gas-charge and useful-volume sizing conditions; Thermal sizing conditions and volume calculations; Pressure-volume characteristic conditions; Gas-charge and sizing characteristic conditions; Actual size connection dimensions and mounting clearances
21-22	12-13	Safety and installation requirements; Manufacturer supplementary documentation and operating instructions

Bladder-type accumulator

Type HAB



- ▶ Component series 6X
- ▶ Nominal volume 1 ... 50 liters
- ▶ Maximum operating pressure 350 bar



Features

- ▶ Hydro-pneumatic accumulators for use in stationary machinery and systems
- ▶ Use:
 - Energy storage in intermittent operation systems
 - Energy reserve for emergencies
 - Compensation of leakage losses
 - Impact and vibration absorption
 - Volume compensation in case of pressure and temperature change
- ▶ Approval:
 - according to PED 2014/68/EU
 - according to NR13
 - according to TR CU 032/2013

Contents

Features	1
Ordering code	2, 3
Function, section	4
Technical data	5
Application, mode of operation	6
Calculation	6, 7
Characteristic curves	8, 9
Dimensions	10
Accessories	11 ... 18
Spare parts	19, 20
Important notes	21
Safety equipment	21
Further information	22

Ordering code

01	02	03	04	05	06	07	08	09	10	11	12	13	14				
HAB		-		-	6X	/			-			1	1	1	-		

Device designation

01	Bladder-type accumulator	HAB
----	--------------------------	-----

Nominal volume

02		1	2.5	4	6	10	20	24	32	50	
----	--	---	-----	---	---	----	----	----	----	----	--

Maximum operating pressure

03	350 bar	●	●	●	●						350
	330 bar	○	○	○	○	●	●	●	●	●	330
	50 bar			○							50
	30 bar				○						30
	20 bar					○					20
	10 bar						○				10

Component series

04	60 ... 69 (unchanged installation and connection dimensions)	6X
----	--	----

Preload pressure

05	0 bar	●	●	●	●	●	●	●	●	●	0
	> 0 bar	○	○	○	○	○	○	○	○	○	

Port size for hydraulic fluid ¹⁾

06	G3/4" pipe thread	●									G05
	G1 1/4" pipe thread		●	●	●						G07
	G2" pipe thread					●	●	●	●	●	G09
	2" SAE flange (high-pressure series)					○	○	○	○	○	S19

Type of mounting for hydraulic fluid ¹⁾

07	Pipe thread with radial sealing surface	●	●	●	●	●	●	●	●	●	G
	Flange mounting with axial sealing surface					○	○	○	○	○	F

Gas port form ¹⁾

08	Gas valve ISO 4570 8V1	●	●	●	●	●	●	●	●	●	2
	Gas valve 5/8"-18 UNF	○	○	○	○	○	○	○	○	○	3

Diaphragm material

09	NBR	●	●	●	●	●	●	●	●	●	N
	ECO			○		○			○		E
	FKM				○	○	○		○	○	F
	HNBR	○	○	○	○	○	○	○	○	○	H

Tank material

10	Steel	1
----	-------	---

Surface of the tank inside

11	Steel	1
----	-------	---

Surface of the connection side

12	Steel	1
----	-------	---

¹⁾ Other ports upon request

●	Preferred program
○	Delivery range
	Upon request

Ordering code

01	02	03	04	05	06	07	08	09	10	11	12	13	14
HAB		-	-	6X	/			-		1	1	1	-

Nominal volume

02		1	2.5	4	6	10	20	24	32	50	
----	--	----------	------------	----------	----------	-----------	-----------	-----------	-----------	-----------	--

Approval ²⁾

13	Operating instructions	EU	•										BA
	PED 2014/68/EU	EU		•	•	•	•	•	•	•	•	•	CE
	National Requirement 13	EU + Brazil			o	o	o	o	o	o	o	o	CE+NR13
	TR CU 032/2013	EU + Eurasian customs union		o	o	o	o	o	o	o	o	o	CE+EAC

Additional details

14	Further details in the plain text, e.g. special versions	*
----	--	---

²⁾ Further approvals upon request

•	Preferred program
o	Delivery range
	Upon request

Preferred types HAB-6X

Type	Material no.
HAB1-350-6X/0G05G-2N111-BA	R901435300
HAB2.5-350-6X/0G07G-2N111-CE	R901435301
HAB4-350-6X/0G07G-2N111-CE	R901435302
HAB6-350-6X/0G07G-2N111-CE	R901435303
HAB10-330-6X/0G09G-2N111-CE	R901435304
HAB20-330-6X/0G09G-2N111-CE	R901435305
HAB24-330-6X/0G09G-2N111-CE	R901435306
HAB32-330-6X/0G09G-2N111-CE	R901435307
HAB50-330-6X/0G09G-2N111-CE	R901435308

Function, section

General information

Hydro-pneumatic accumulators are hydrostatic devices capable of storing a certain amount of energy in order to release it to the hydraulic system when needed.

Fluids only possess low compressibility; however, gases are highly compressible. The working principle of all gas-loaded hydro-pneumatic accumulators is based on this difference.

The difference between bladder and diaphragm type accumulators lies in the type of separator element.

Hydro-pneumatic accumulators essentially consist of a fluid section and a gas section with a gas-tight separator element. The fluid section has a connection to the hydraulic circuit.

If a higher liquid pressure is applied to a specific quantity of pressurized gas, the gas volume decreases as the liquid pressure increases, with the gas pressure increasing with the liquid pressure.

If the pressure of the fluid decreases, the fluid is pushed back into the hydraulic system by the expanding gas until the pressure is balanced again.

Bladder-type accumulator


Bladder-type accumulators consist of a seamless cylindrical pressure container (1) made of high-strength steel.

An elastic bladder (2) mounted inside the container separates the accumulator into a gas side and a fluid side. Via the gas valve (4), the bladder is filled with nitrogen up to the intended gas filling pressure p_0 .

The oil valve (3) located inside the oil port of the bladder-type accumulator closes if the pressure on the gas side is higher compared to the fluid side. This prevents the bladder from entering the oil channel and being destroyed. When the minimum operating pressure is reached, a small fluid volume (approx. 10% of the nominal volume of the hydro-pneumatic accumulator) should remain between the bladder and the oil valve in order to prevent the bladder from hitting the valve during each expansion process.

The gas valve (4) consists of sealing cap (4.1), gas valve insert (4.2), gas prefill valve body (4.3), and O-ring (4.4). These parts can be replaced individually.

The type cap (7) includes the technical data and features of the hydro-pneumatic accumulator.

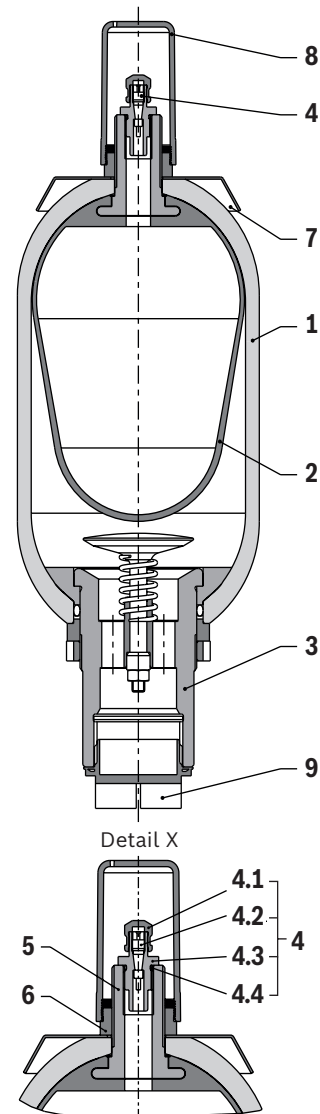

Symbol



- 1 Tank
- 2 Bladder
- 3 Oil valve
- 4 Gas valve
- 5 Gas valve support
- 6 Nut
- 7 Type cap
- 8 Cover cap
- 9 Protective cap of oil valve

Technical data

(For applications outside these values, please consult us!)

General											
Nominal volume	V_{nom}	l	1	2.5	4	6	10	20	24	32	50
Weight		kg	7	10	16.5	20	32	53	61	85	123
Design	Bladder-type accumulator										
Installation position	Bottom fluid connection socket, others upon request										
Type of mounting	With clamping collars and console										
Line connection	Screw-in thread										
Surface	Primed, blue color (RAL 5010)										

Hydraulic											
Nominal volume	V_{nom}	l	1	2.5	4	6	10	20	24	32	50
Effective gas volume	V_{eff}	l	1.0	2.4	3.7	5.9	9.2	18.1	24.5	33.4	48.7
Maximum flow	q_{max}	l/min	240	450	450	450	900	900	900	900	900
Maximum operating pressure	p_{max}	bar	330	330	330	330	330	330	330	330	330
			350	350	350	350	–	–	–	–	–
Maximum pressure fluctuation range	$\Delta p_{dyn} = p_2 - p_1$	bar	200	200	200	200	125	125	125	125	125
Operating pressures and useful volume	See calculations on page 6 ... 9										

Pneumatic											
Charging gas	Nitrogen, at least cleanliness class 4.0, $N_2 = 99.99$ vol.%										
Gas filling pressure (at 20 °C room temperature)	p_0	bar	$p_0 \leq 0.8$ of p_{max}								

Hydraulic fluid	Classification	Material	Standards	Data sheet
Mineral oils	HLP, HLPD, HVLP, HVLPD	NBR, ECO, HNBR	DIN 51524	90220
Special fluids	► environmentally compatible	HETG	ISO 15380	90221
		HEES		
		HEPG		
	► water-free, flame-resistant	HFDU	ISO 12922	90222
		HFDR		
	► containing water, flame-resistant	HFC	ISO 12922	90223

Further information on the hydraulic fluids:		
Temperature range (others on request)	°C	NBR: –15 ... +80 ¹⁾ FKM: –20 ... +80 ²⁾ HNBR: –30 ... +80 ³⁾ ECO: –32 ... +80 ⁴⁾
Maximum admissible degree of contamination of the hydraulic fluid, cleanliness class according to ISO 4406 (c)		Class 20/18/15

1) Acrylonitrile butadiene rubber

2) Fluor rubber

3) Hydrated acrylonitrile butadiene rubber

4) Epichlorohydrin rubber

Application, mode of operation


Applications

- Various applications exist for hydro-pneumatic accumulators:
- ▶ Energy storage in order to save pump drive power in intermittent operation systems.
 - ▶ Energy reserve for emergencies, e.g. upon failure of the hydraulic pump.
 - ▶ Compensation of leakage losses.
 - ▶ Impact and vibration absorption in case of periodic vibrations.
 - ▶ Volume compensation in case of pressure and temperature changes.

Mode of operation

Fluids are almost incompressible and therefore cannot store pressure energy. Hydro-pneumatic accumulators use the compressibility of a gas for fluid storage. Exclusively use nitrogen with a minimum cleanliness class of 4.0!

$N_2 = 99.99 \text{ vol.}\%$

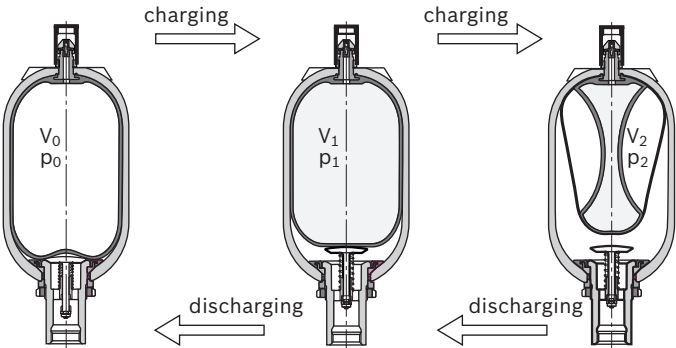

Calculation

Pressures

For calculation of an accumulator, the following pressures play a respective role:

p_0	Gas filling pressure at room temperature and drained fluid chamber
$p_0(t)$	Gas filling pressure at operating temperature
$p_0(t_{max})$	Gas filling pressure at maximum operating temperature
p_1	Minimum operating over pressure
p_2	Maximum operating over pressure

In order to achieve the best utilization of the accumulator volume possible as well as a long life cycle, compliance with the following values is recommended:

$p_0(t_{max}) \sim 0.9 \times p_1 \quad (1)$

The highest hydraulic pressure should not exceed four times the filling pressure, as otherwise too much stress will be put on the elasticity of the bladder, resulting in too great a compression change with strong gas heating:

$p_2 \leq 4 \times p_0 \quad (2)$

The life cycle of the accumulator bladder is the higher the smaller the difference between p_1 and p_2 is. However, the operating ratio of the maximum accumulator capacity will also be reduced accordingly.

Calculation

Oil volume

According to the pressures $p_0 \dots p_2$, the gas volumes $V_0 \dots V_2$ will result.

In this process, V_0 simultaneously is the nominal volume of the accumulator.

The available oil volume ΔV corresponds to the difference of the gas volumes V_1 and V_2 :

$$\Delta V \equiv V_1 - V_2 \quad (3)$$

The gas volume variable within a pressure differential is determined by the following equations:

- For an isothermal state change of gases, i.e. when the change of the gas cushion happens so slowly as to leave sufficient time for a complete heat exchange between the nitrogen and its environment, therefore keeping the temperature constant, the following applies:

$$p_0 \times V_0 = p_1 \times V_1 = p_2 \times V_2 \quad (4.1)$$

- For an adiabatic state change, i.e. a quick change of the gas cushion accompanied by a temperature change of the nitrogen, the following applies:

$$p_0 \times V_0^\chi = p_1 \times V_1^\chi = p_2 \times V_2^\chi \quad (4.2)$$

χ = ratio of the specific gas heats (adiabatic exponent),
for nitrogen = 1.4

In practice, state changes rather follow adiabatic laws. Often charging is isothermal and discharge is adiabatic. Considering the equations (1) and (2), ΔV is between 50% and 70% of the nominal accumulator volume. The following applies as a guiding principle:

$$V_0 = 1.5 \dots 3 \times \Delta V \quad (5)$$

Calculation diagram

For graphic determination, the formulas (4.1) and (4.2) are converted into diagrams on pages 8 and 9.




Depending on the task, the available oil volume, the accumulator size or the pressures can be determined.

Correction factor K_i and K_a



The equations (4.1) and (4.2) apply to ideal gases only. The behavior of real gases, however, will show considerable variation at operating pressures above 200 bar which will have to be accounted for by correction factors. These can be taken from the following diagrams. The correction factors the ideal sampling volume ΔV is to be multiplied with lie within a range of 0.6 ... 1.

Application of calculation diagrams

(see page 8 ... 9)

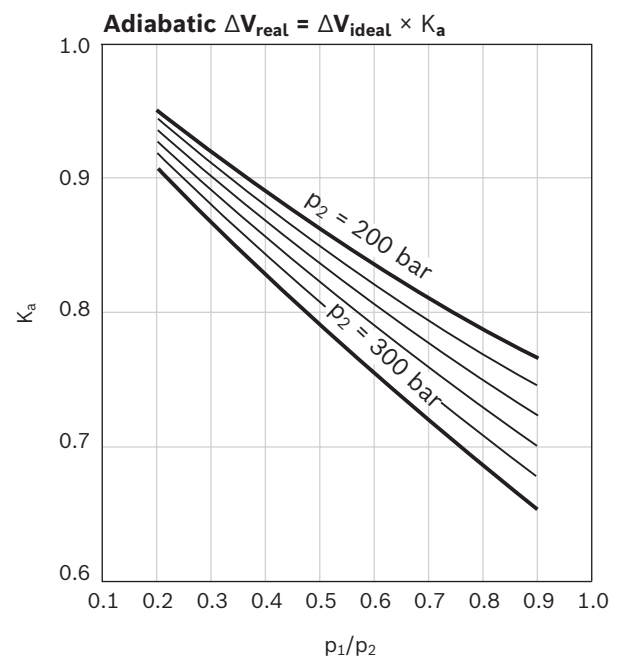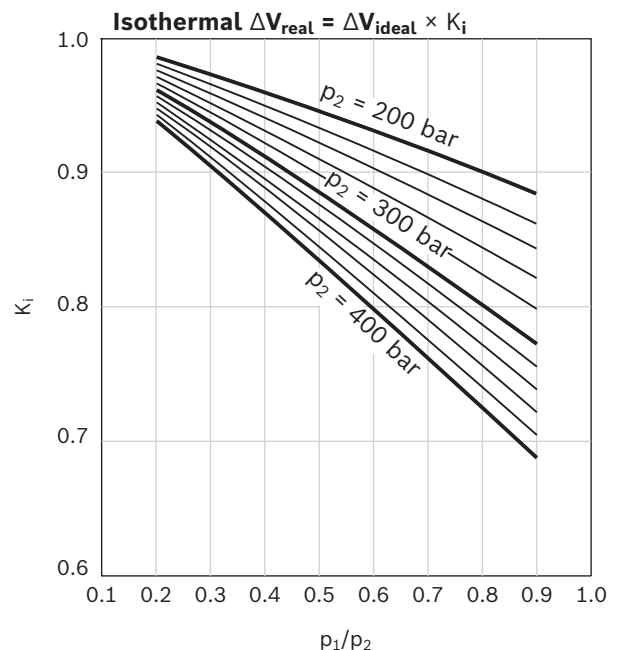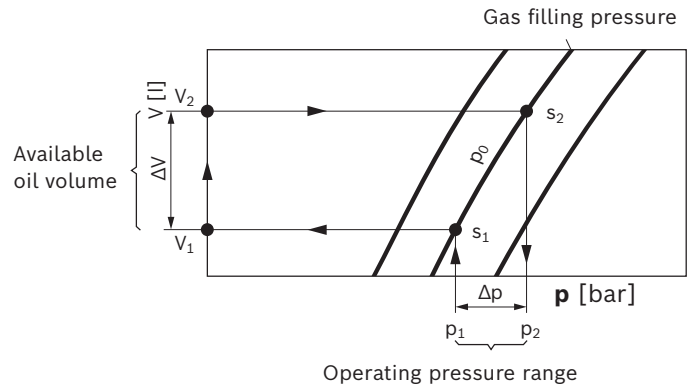


Characteristic curves

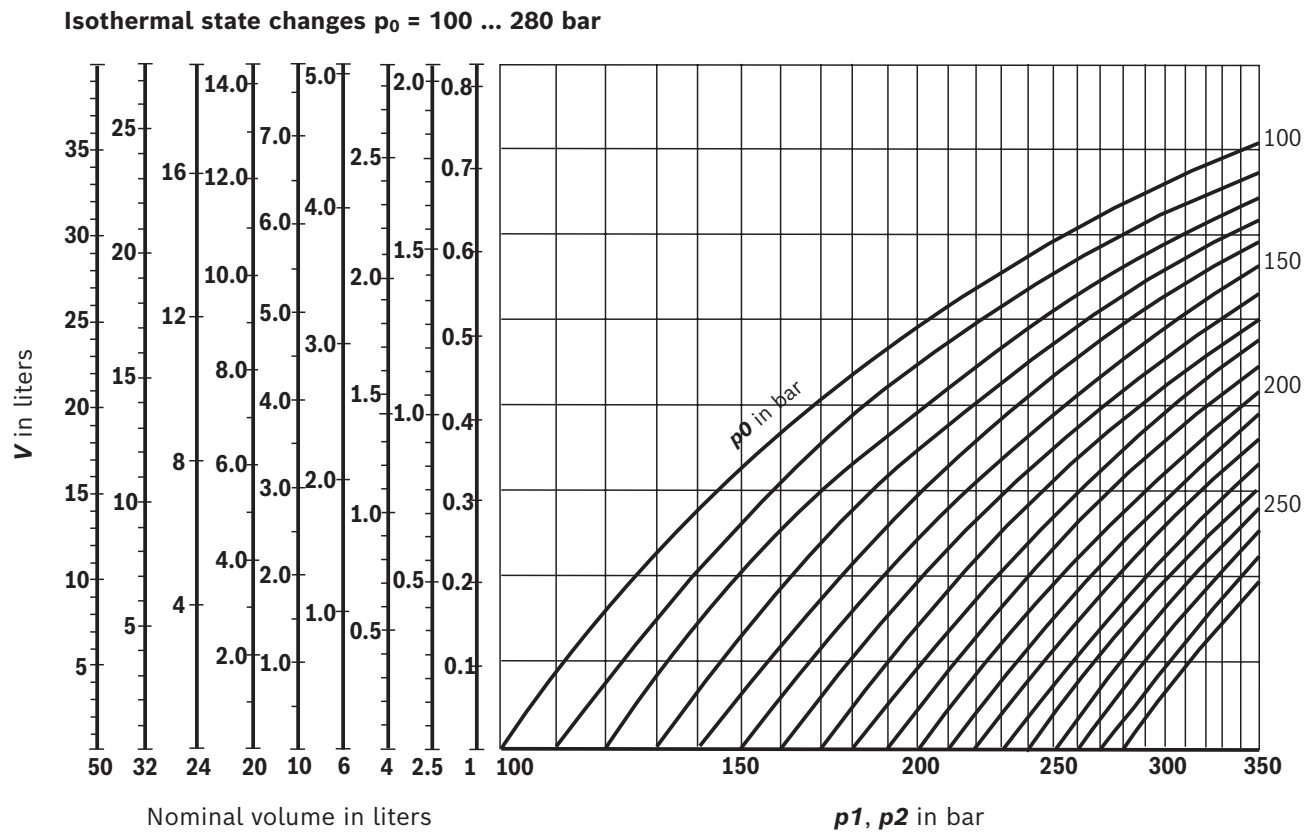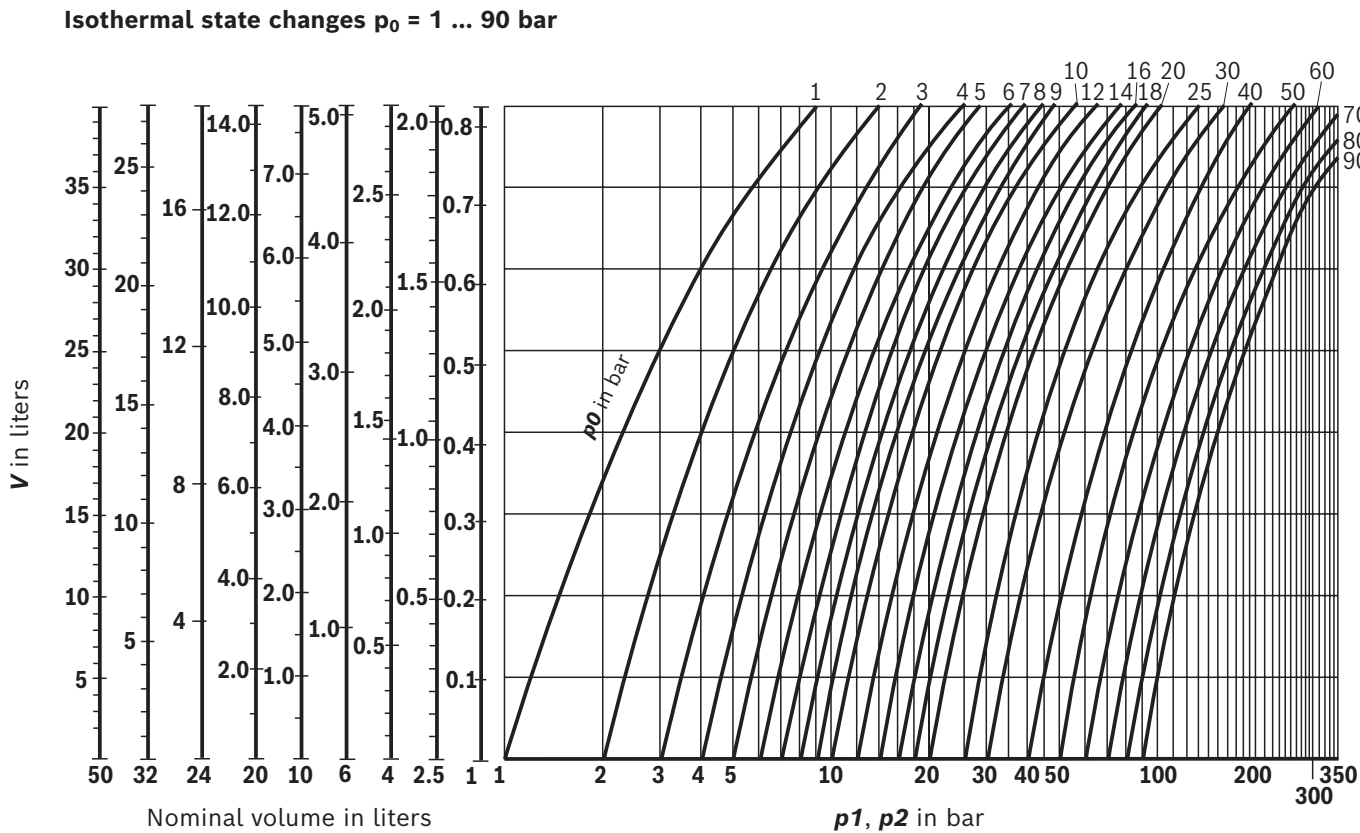


Characteristic curves


Adiabatic state changes $p_0 = 1 \dots 90$ bar

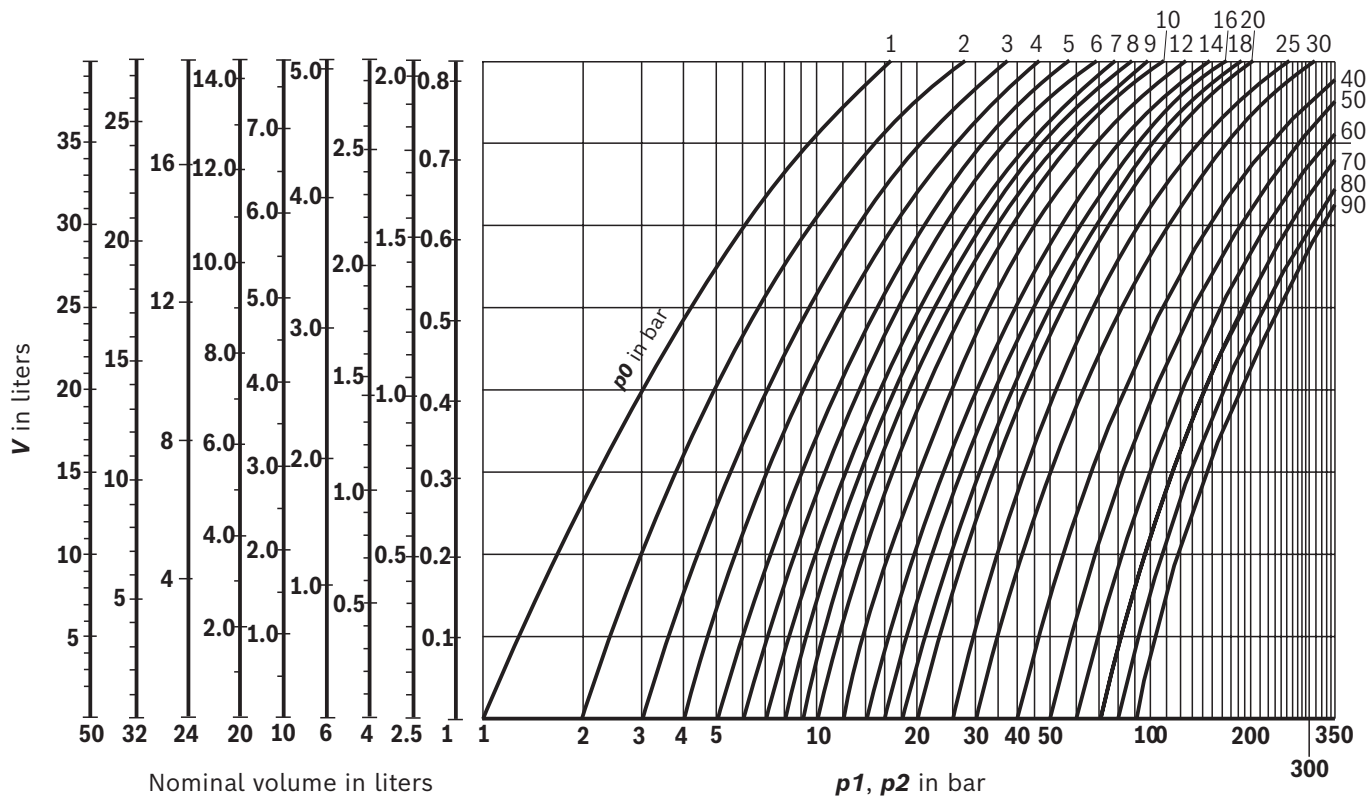


Adiabatic state changes $p_0 = 100 \dots 280$ bar

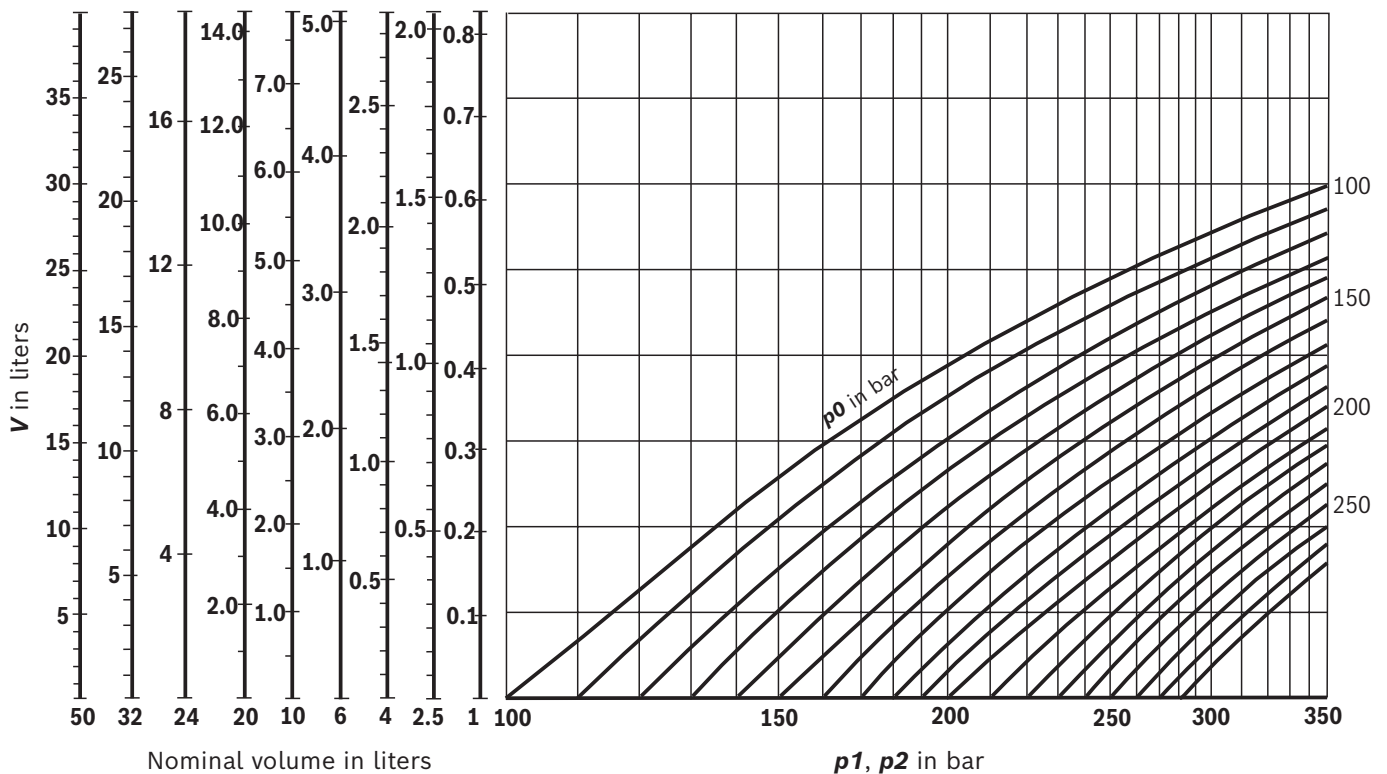


Dimensions
 (dimensions in mm)

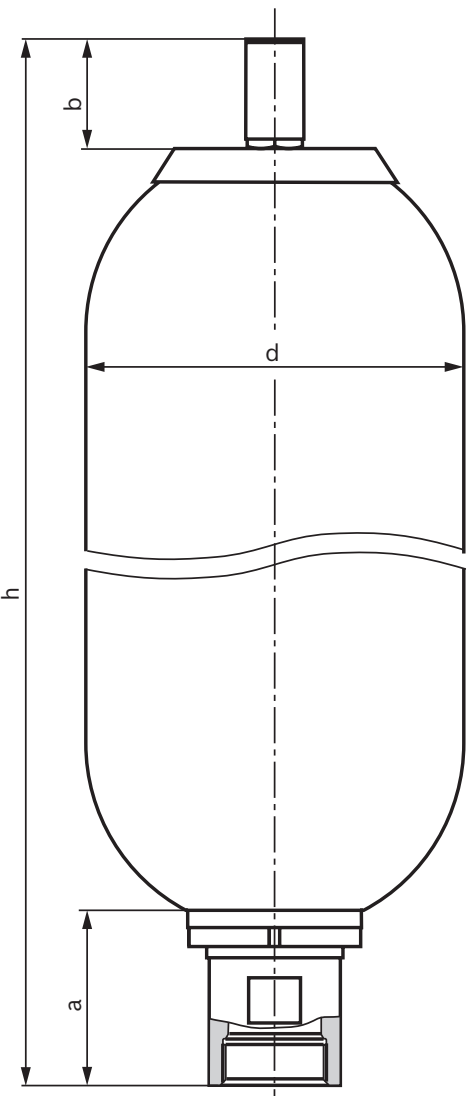


Gas port form "2"
 Gas valve ISO 4570 8V1

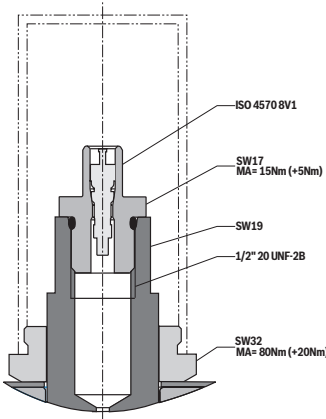


Gas port form "3"
 Gas valve 5/8"-18 UNF

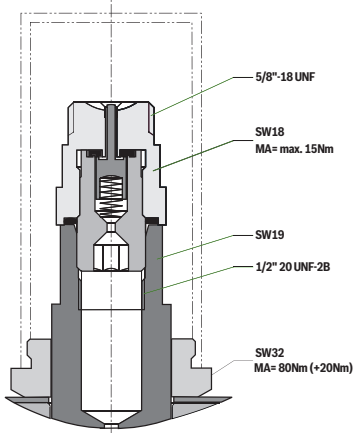

Type of mounting "G"
 Pipe thread with radial
 sealing surface

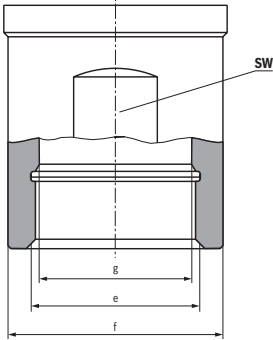

Type of mounting "F"
 Flange mounting with
 axial sealing surface

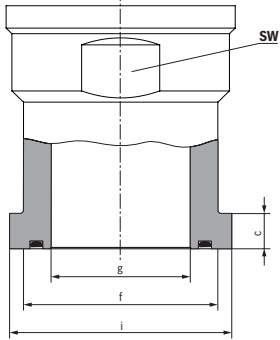

Type of mounting G											
Nominal volume [L]	Port size	h	d	a	b	e	f	g	i	j	SW
1	G05	337.5±17	Ø114±1.14	65±3	71.5±3	G ³ / ₄ "	Ø52.4	Ø23H7	-	-	50
2.5	G07	541.5±21	Ø114±1.14	65±3	71.5±3	G1 ¹ / ₄ "	Ø52.4	Ø36H8	-	-	50
4	G07	421.5±21	Ø168±1.68	65±3	71.5±3	G1 ¹ / ₄ "	Ø52.4	Ø36H8	-	-	50
6	G07	552.5±17	Ø168±1.68	65±3	71.5±3	G1 ¹ / ₄ "	Ø52.4	Ø36H8	-	-	50
10	G09	575±16	Ø219±2.19	101.5±3	71.5±3	G2"	Ø76	Ø54H7	-	-	70
20	G09	885±16	Ø219±2.19	101.5±3	71.5±3	G2"	Ø76	Ø54H7	-	-	70
24	G09	1020±16	Ø219±2.19	101.5±3	71.5±3	G2"	Ø76	Ø54H7	-	-	70
32	G09	1405±16	Ø219±2.19	101.5±3	71.5±3	G2"	Ø76	Ø54H7	-	-	70
50	G09	1920±16	Ø219±2.19	101.5±3	71.5±3	G2"	Ø76	Ø54H7	-	-	70

Type of mounting F											
Nominal volume [L]	Port size	h	d	a	b	e	f	g	i	j	SW
10	S19	577±16	Ø219±2.19	103.5±3	71.5±3	-	Ø67	Ø48	Ø76.6	12.6	70
20	S19	887±16	Ø219±2.19	103.5±3	71.5±3	-	Ø67	Ø48	Ø76.6	12.6	70
24	S19	1022±16	Ø219±2.19	103.5±3	71.5±3	-	Ø67	Ø48	Ø76.6	12.6	70
32	S19	1407±16	Ø219±2.19	103.5±3	71.5±3	-	Ø67	Ø48	Ø76.6	12.6	70
50	S19	1922±16	Ø219±2.19	103.5±3	71.5±3	-	Ø67	Ø48	Ø76.6	12.6	70

Important notes

Intended use

Rexroth bladder-type accumulators type HAB..-6X are intended for set-up of hydraulic drive systems in stationary mechanical engineering and plant construction. In mobile applications or applications in which acceleration forces are applied to the bladder-type accumulator during intended use, its use is permitted only following release by the competent Rexroth product manager. Please contact technical sales for this. Rexroth bladder-type accumulators type HAB..-6X are not intended for private use.

Project planning information

Bladder-type accumulators have to be safely and permanently fastened to the machine or system using mounting elements. The fastening is intended to keep the oil port tension-free. Particularly, no tension forces or static or dynamic inertia forces should be applied to the oil port. Thermal expansion of the supporting structure and vibrations originating from the environment should be considered in the selection of suitable mounting points.

Safety instructions for hydraulic accumulators

For bladder-type accumulators type HAB..-6X, operating instructions 50171-B must be observed. The machine end-user will have sole responsibility for complying. General information for hydro-pneumatic accumulators in hydraulic system can be found in ISO 4413.

Keep all documents included in the delivery in a safe place; they will be required by the expert in recurring tests.

Legal provisions

Hydro-pneumatic accumulators are pressure vessels and subject to the application of national provisions and/or regulations valid at the place of installation. In Germany, the Ordinance on Industrial Safety and Health (BetrSichV) applies. Special regulations are to be observed in shipbuilding, aircraft construction, mining, etc.

Authorized persons

According to Ordinance on Industrial Safety and Health (BetrSichV), only authorized persons may carry out tests. Authorized persons are such persons having obtained the required expert knowledge through professional training, experience and recent professional activity.

Safety equipment

Notice:

Hydro-pneumatic accumulators have to be secured against operation outside of the admissible limits according to Pressure Equipment Directive 2014/68/EU.

In order not to exceed the maximum operating pressure, Bosch Rexroth recommends the use of an accumulator shut-off block type ABZSS according to data sheet 50131.

Further information

Operating instructions valid for HAB1 ... HAB50

Language	Operating instructions
German	RE 50171-B
English	RE 50171-B
French	RF 50171-B
Spanish	RS 50171-B
Italian	RI 50171-B
Chinese	RC 50171-B
Russian	R-RS 50171-B
Norwegian	R-NO 50171-B
Polish	R-PL 50171-B
Czech	R-CZ 50171-B
Romanian	R-RU 50171-B
Hungarian	RU 50171-B
Portuguese	RP 50171-B
Swedish	R-SK 50171-B
Finnish	R-SF 50171-B
Turkish	RT 50171-B

- Accumulator shut-off block:
- Selection of filters:
- Information on available spare parts:

CE Declarations of Conformity

In German, English, French

Type	Document number
HAB1-...-60/...BA	–
HAB2.5-...-60/...CE	RA56313069
HAB4-...-60/...CE HAB6-...-60/...CE	RA56313070
HAB10-...-60/...CE HAB20-...-60/...CE HAB24-...-60/...CE HAB32-...-60/...CE HAB50-...-60/...CE	RA56313071

Data sheet 50131

www.boschrexroth.com/filter

www.boschrexroth.com/spc

Bosch Rexroth AG
Industrial Hydraulics
Zum Eisengießer 1
97816 Lohr am Main, Germany
Phone +49 (0) 93 52/40 30 20
my.support@boschrexroth.de
www.boschrexroth.de

© All rights reserved to Bosch Rexroth AG, also regarding any disposal, exploitation, reproduction, editing, distribution, as well as in the event of applications for industrial property rights.
The data specified above only serve to describe the product. No statements concerning a certain condition or suitability for a certain application can be derived from our information. The information given does not release the user from the obligation of own judgment and verification.
It must be remembered that our products are subject to a natural process of wear and aging.